

取扱説明書



Hi-Res Wired Earphones

HP-NX10


付属品：イヤークーピース(XS、S、M、L)×各1セット
取扱説明書/保証書(本書)×1

このたびは弊社製品をお買い求めいただき、まことにありがとうございます。本書には、使用方法や、取り扱い上の注意などが記載されております。製品を使用する前に必ず本書をよくお読みください。本書はいつでも参照できるように保管しておいてください。

安全にご使用いただくために

本製品を安全にご使用いただくために、ここに記載されている警告・注意事項を必ずお読みになり内容をよく理解された上でご使用ください。ここに記載の警告・注意事項を守らない場合、お客様や第三者の方々への危害(負傷・障害・死亡)、財産への損害(故障・破損・破壊・損失)を与えたり、その原因となる可能性があります。本来の用途以外、本書に記載以外の方法での使用は絶対に行わないでください。

リモコンを使う

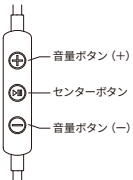

センターボタンの操作

▶/ 再生/一時停止	1回押す
▶▶ 曲送り	2回押す
◀◀ 曲戻し	3回押す
Siri / 音声アシスタントの起動	長押し
受話	着信時に1回押す
終話	通話時に1回押す
着信拒否	着信時に長押し

※接続先機器によって一部機能がご利用いただけない場合があります。

アジャスタブルポート

イヤークーピースの装着位置を2段階で調節でき、音の調整ができます。また、自分の耳にしっかりとフィットさせることで耳へのストレスが少なく、通勤や通学などの長時間使用にも最適です。



イヤークーピースの交換について

ご購入時にはMサイズのイヤークーピースが取り付けられております。耳にフィットしない場合は同梱のLサイズ、SサイズまたはXSサイズと交換してください。

- イヤークーピースは所定の位置までしっかりと取り付けてください。しっかりと取り付けられていない場合、イヤホン着脱時にイヤークーピースが外れ、耳に残る可能性があります。
- イヤークーピースが汚れた場合は、イヤホン本体から取り外してから薄めた中性洗剤で手洗いをしてください。お手入れの際は水分をふき取り、完全に乾いてからご使用ください。
- イヤークーピースは消耗品です。長期の使用・保管により劣化する場合があります。
- 弊社オンラインショップではイヤークーピース単品の販売も行っておりますので、併せてご利用ください。

製品仕様

●HP-NX10

【イヤホン部】	型式	ダイナミック型
	ドライバー	Φ7.4mm
	出力音圧レベル	107.2±3dB
	再生周波数帯域	10Hz~45,000Hz
	インピーダンス	18Ω
	プラグ	Φ3.5mm 4極 金メッキステレオミニプラグ
	ケーブル長さ	約120cm(Y型)タイプ
【マイク部】	周波数特性	100~10,000Hz
	指向特性	全指向性
	感度	-42±3dBV/Pa

- 一般に、記載されている製品名、会社名は各社の登録商標または商標です。●本書の文中では「TM」、「®」および「®」マークを表示してありません。●本書で使用されているイラストは、説明のための便宜上、商標ではないことがあります。●本書の著作権はラヂウス株式会社に属します。弊社に許可なく本書の一部、もしくは全部を複製、複製、改変、もしくは転載することを禁じます。●本書に記載されている内容に従わないことにより生じる結果について、弊社はいかなる責任も負いません。●本書の内容に不明な点、誤り、もしくは記載のないなどがある場合は、本製品をご購入いただいた販売店、もしくは弊社サポートセンターまでお問い合わせください。●本書の内容は改良のため予告なく変更することがあります。●本製品の仕様、および外観は改良のため予告なく変更することがあります。

USER'S MANUAL



Hi-Res Wired Earphones

HP-NX10

Includes: 4 sets of Earpieces (XS/S/M/L),
User's Manual/Warranty (this document)

Thank you for purchasing radius product. The User's Manual mainly describes warnings, cautions, and how to use of the product. Read the User's Manual before using the product. Please remain this document for future reference.


For Your Own Safety

Before using the product, read the warnings and cautions in this User's Manual thoroughly. If you ignore the warnings and cautions and mishandle the product, there is a risk of damage to you and/or other people (injury, death), and to properties (failure, breakage, loss) or cause such damages. Use the product only as stated in the User's Manual.

⚠ WARNING ⚠ CAUTION

- Please note that we shall not be responsible for any loss, damages and troubles caused through the product.
- Never use this product while you are driving a car, motorcycle, bicycle, or any other vehicle. There is a risk of a traffic accident.
- Pay attention to the surrounding environment and traffic while walking. Never use this product in places where inability to hear ambient sounds is dangerous such as train station, street and construction site.
- Do not disassemble, modify or attempt to repair this product.
- When young children use this product or audio device such as a music player, they should be under supervision and guidance of adults understanding the operation instructions, warnings and cautions. In addition, avoid storing this product within the reach of young children or pets.
- Avoid using this product at a high volume for a long period of time. There is a risk of influencing your hearing ability.
- Be careful when attaching or removing this product. Insert the plug at the right angle for connecting the product to an audio device. Also, be careful not to let dust or other material get inside.
- If your skin that is touching the product becomes irritated, stop using the product immediately.
- Do not drop or give strong shock to this product.
- Keep this product dry. Do not use it with wet hands.
- To avoid damaging the product, do not use/store this product: in areas with strong magnetic fields; in areas static electricity/electric noises occur; in damp areas; where electricity/water may leak; where temperature and humidity are high, in direct sunlight; near fire or in a hot place; in dusty areas.
- If the plug is not clean, you may hear jumps and noises. Use a dry, soft cloth to clean the plug. Do not use organic solvents such as paint thinner and benzene, or chemical-impregnated cloth. Do not use them for cleaning the other part of the product either.
- Keep the product out of reach of children. There is a risk of swallowing it.

Using Remote Controller

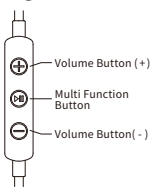

Operation of the Multi Function Button

▶/ Play/Pause	Press once
▶▶ Next	Press twice
◀◀ Previous	Press 3 times
Start Siri / Voice Assistant	Press once and hold
Pick up call	Press once
Hang up	Press once
Call rejection	Press once and hold

Depends on devices, some remote functions may not be available.

Adjustable Port

Sound will be varied by adjusting the earpiece position. Users can select the most suitable earpiece size and position to enjoy the best sound quality without stress. It is a perfect solution for long-term usage.



Replace Earpiece

M-size earpieces are attached to the headphones initially. Replace proper size of earpiece to fit your ears if necessary.

- Attach earpieces to fit to the gap of the headphones. If the earpieces are not set properly, they may detached from the headphones and remain in your ear when you remove the headphones.
- When the earpieces need cleaning, remove the earpieces from the headphones and wash them with a mild detergent by hand. Wipe the earpieces and make sure they are dry before attaching them to the headphones.
- Earpieces are expendables. They may degrade with long-term usage or storage.

Product Specification

●HP-NX10

Earphone	Type of Driver Unit	Dynamic
	Size of Driver Unit	Φ7.4mm
	Output Sound Pressure Level	107.2±3dB
	Frequency Response Range	10Hz~45,000Hz
	Impedance	18Ω
	Plug	Gold-plated 3.5mm 4 poles stereo mini plug
	Cable Length	Approx. 120cm (Y-style)
Microphone	Frequency Response	100-10,000Hz
	Directivity	Omni directional
	Sensitivity	-42±3dBV/Pa

- Product names and company names mentioned herein are trademarks or registered trademarks of the respective owners. ●TM, ® and © marks are omitted herein. ●Images used herein are for explanation and may not be accurate. ●radius co., ltd. holds copyright of this document. No part of this document may be copied, reproduced, modified, or transmitted in any form or by any means without the prior written permission of radius co., ltd. ●radius co., ltd. shall hold no responsibility to results arising from following the instructions described herein. ●If this document is unclear, contains mistakes or is missing information, contact the dealer from which you purchased the product. ●The information of this document is subject to may change without prior notice. ●The specifications and exterior of this product are subject to change without prior notice.

使用说明书



Hi-Res Wired Earphones

HP-NX10

付属品：耳塞套 (XS、S、M、L) 各一副、
说明书/保修卡 (本册)

尊敬的顾客，衷心感谢您选购本公司产品。本说明书记载了产品装设、使用方法以及使用该产品时应注意的事项等。请您务必在使用产品前，仔细阅读本说明书。请妥善保管此说明书，以作参照之用。


安全使用本产品须知

为安全使用本产品，请您在使用前事先阅读本册，并理解所记载的各警告及注意事项。如不严格遵守本册记载的各警告及注意事项，将可能给顾客或第三者带来人身危害(如:受伤、伤残、死亡等)或财产损失(如:故障、破损、损坏、损失)。除本册记载的使用途径外，请勿将产品做其他使用。

⚠ 警告・注意

- 若您忽视本注意事项，不当使用产品，将可能导致机械故障等物品损失及数据丢失，而且，可能导致人身伤害。
- 在操作汽车、摩托车、自行车等车辆时，切勿使用本产品。如有不慎，将可能导致交通事故。
- 步行时使用本产品，也请注意周围的情况。尤其在车站站台、道路上或施工现场等地方，由于听不见周围声音将导致危险隐患。因此，请勿在上述场合使用本产品。
- 请勿自行拆开、改造或修理本产品。出现故障时，请与我司售后服务部联系。
- 未成年人使用本产品连接音乐播放器时，请在熟知本产品使用方法、理解各注意事项的成人监督及指导下使用。另外，请将产品放置于小孩及宠物接触不到的地方。
- 长期使用刺激耳朵的过大音量，将给听力造成不良影响。因此，请在使用过程中注意调节，使用适当小音量。
- 请谨慎插入及取出音频插头。将插针插入音乐播放器的音频接口时，请注意按正确角度插入插头。此外，请注意避免灰尘、垃圾等进入接口。
- 使用本产品时，若人体与产品直接接触部位感到不适，请立即停止使用。如继续使用，将可能引起发炎或疼痛等症状。
- 请勿将本产品掉落在地或强烈震动本产品。
- 请勿弄湿，或在手处于未干状态下操作使用本产品。
- 请勿在以下场所放置、使用本产品：有强磁场的场所；带静电、电器发出很大噪音的场所；有露水的地方；漏电或漏水等危险场所；高温且湿度大的场所；阳光直射的场所；明火、热气周围及灰尘多的场所。
- 当插头上有污垢时，可能出现声音嘶哑或杂音等现象。此时，请使用干净柔软的抹布进行擦拭保养。此外，请勿使用化学抹布、稀释剂、汽油等有机溶液类清洁剂擦拭。产品本身的保养也同样如此。
- 请将付属品放置于幼童接触不到的地方，以防意外吞食。

使用遥控器

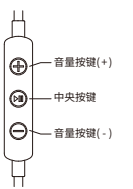

中央按键的操作

▶/ 播放/暂停	按 1 次
▶▶ 下一首音乐	按 2 次
◀◀ 上一首音乐	按 3 次
启动 Siri / Voice Assistant	长按 1 次
接听电话	来电时按 1 次
结束通话	通话时按 1 次
来电拒接	响铃时长按 1 次

※根据使用设备的不同，某些功能可能无法使用。

可调节的端口

本产品可以允许两个耳塞固定位置，可影响您的音量。另外，因耳塞更贴合于自己的耳朵，可减轻耳朵的压力，非常适合长期使用，例如上班或上学。



关于耳塞套的更换

您购入的耳机在出厂时，预装的耳塞套为M号。如果与您的耳朵不匹配，请从附属配件中取出S号或者XS号进行更换。

- 请把耳塞套组装在耳机前腔出音管处的沟槽内。耳塞套如果没有正确安装，使用中从耳塞取出时耳耳，耳塞套有可能脱落而残留在耳朵里。
- 耳塞套弄脏时，请把它从耳机中取出，放在稀释后的中性洗涤剂里清洗。清洗干净后，请擦干水分，待耳塞套完全干透后再使用。
- 耳塞套属于损耗品，长期使用或保存后，可能会老化。

产品规格

●HP-NX10

【耳机部分】	驱动单元形式	动态型
	驱动单元尺寸	Φ7.4mm
	输出音压	107.2±3dB
	频响范围	10Hz~45,000Hz
	阻抗	18Ω
	插头	Φ3.5mm 4极镀金立体声插头
	线长	约120cm (Y型)
【麦克风部分】	频率特性	100~10,000Hz
	指向性	全方位
	灵敏度	-42±3dBV/Pa

- 通常所记载的产品名、公司名等名称，是属于该公司所拥有的商标或注册商标。●本册记载中不特别标注™、®、©等标志。●本文中使用的插图，都是供说明方便使用，也许与实物有所差异。●日本radius公司拥有本说明书所有权。未经本公司许可，任何人不得抄袭、复制、修改或转载本说明书。●根据本说明书记载内容所产生的任何后果，本公司概不负责。●若发现本册内容有疑问、错误、漏记等事项，请至经销商或本公司售后服务部咨询。●本册内容有任何改良变更，恕不另行通知。●本公司产品若有功能或外观改良，恕不另行通知。